


**Oil Level Indicator and Tube**

**Material**

Item	Specification
Motorcraft® SAE 5W-20 Synthetic Blend Motor Oil (US); Motorcraft® SAE 5W-20 Super Premium Motor Oil (Canada) XO-5W20-QSP (US); CXO-5W20-LSP12 (Canada)	WSS-M2C945-A

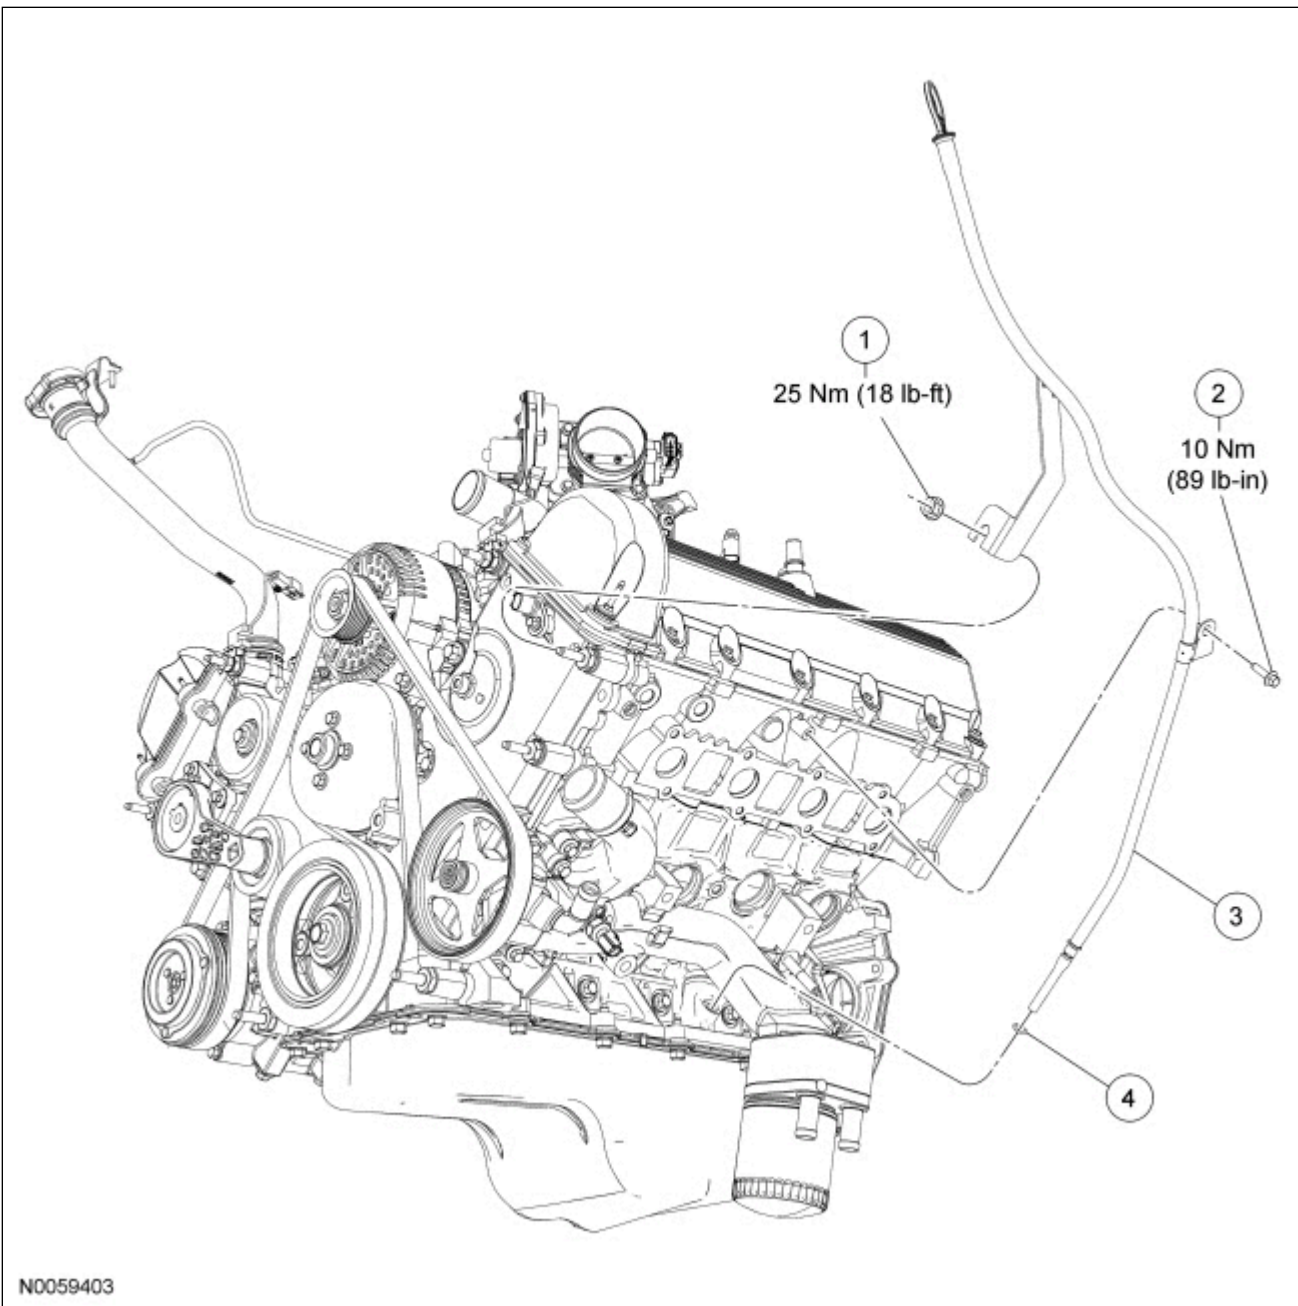

Item	Part Number	Description
1	N804758	Oil level indicator tube support bracket nut

2	N605892	Oil level indicator tube support bracket bolt
3	6K873	Oil level indicator and tube
4	—	Oil level indicator tube O-ring seal

## Removal

1. Remove the Air Cleaner (ACL) and the ACL outlet pipe. For additional information, refer to [Section 303-12](#).
2. Remove the LH exhaust manifold. For additional information, refer to [Exhaust Manifold — LH](#) in this section.
3. Remove the nut, the bolt and the oil level indicator and tube.
  - Discard the O-ring seal.
4. Inspect the oil level indicator tube for damage.

## Installation

1. **NOTE:** *Lubricate the O-ring seal with clean engine oil prior to installation.*

Using a new O-ring seal, position the oil level indicator and install the bolt.

- Tighten to 10 Nm (89 lb-in).
2. Install the front oil level indicator and tube support bracket nut.
    - Tighten to 25 Nm (18 lb-ft).
  3. Install the LH exhaust manifold. For additional information, refer to [Exhaust Manifold — LH](#) in this section.
  4. Install the ACL outlet pipe and the ACL . For additional information, refer to [Section 303-12](#).