


Fuse: Application and ID Battery Junction Box

Battery Junction Box (BJB) (14A003)

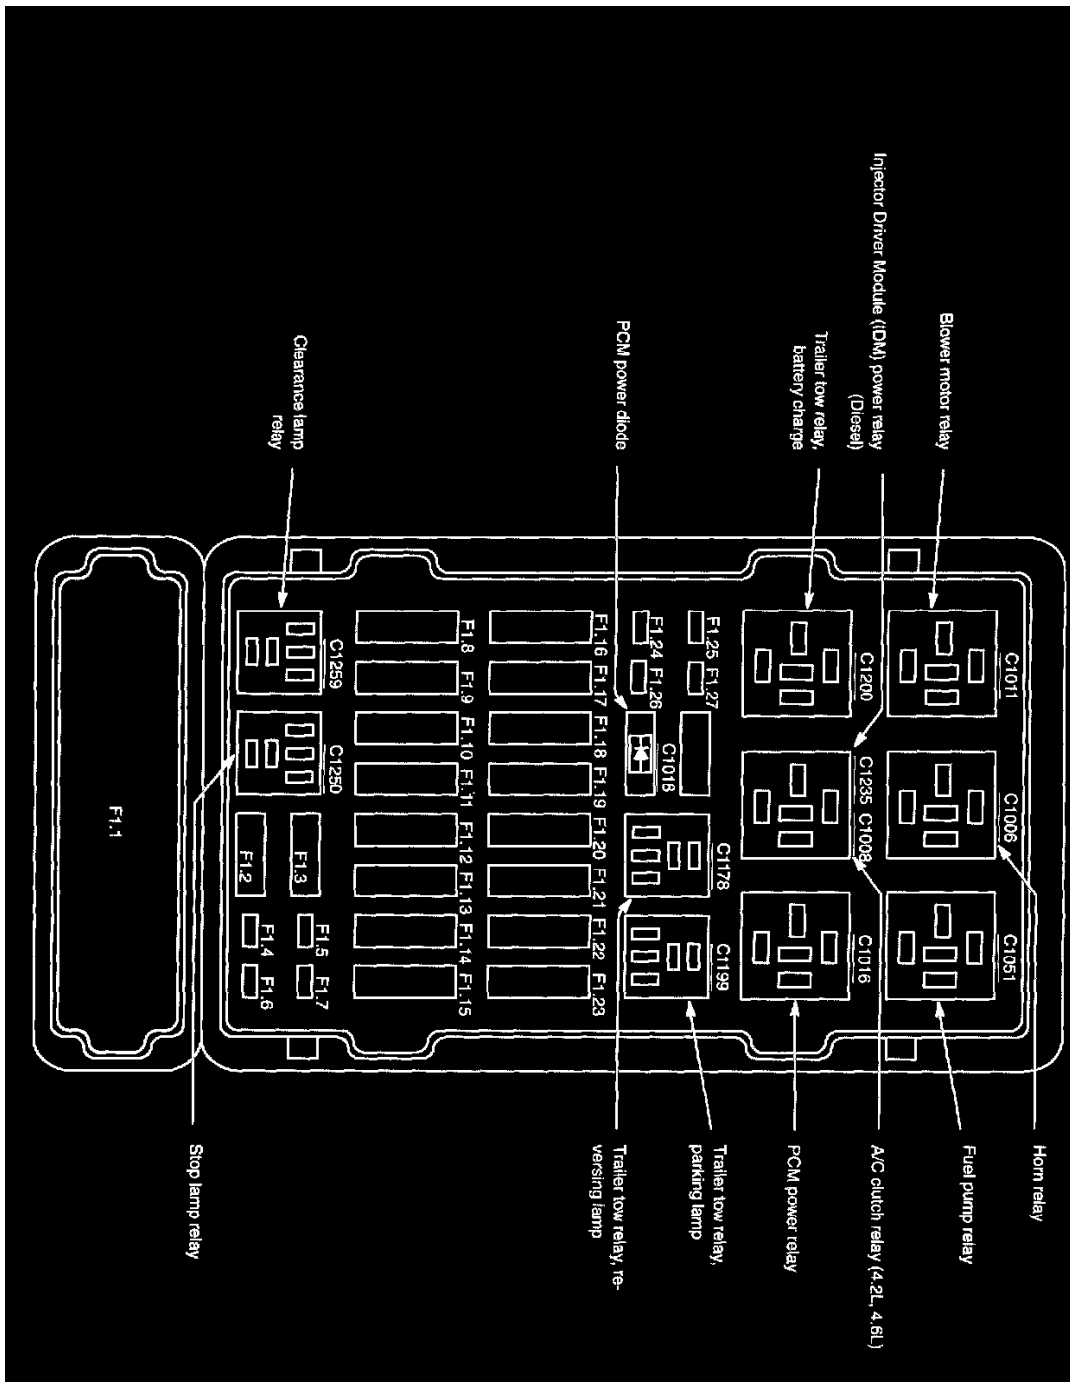

Battery Junction Box (BJB) (14A003)

Fuse	Amps	Circuits protected
F1.1	—	not used
F1.2	—	not used
F1.3	—	not used
F1.4	10	keep alive memory, instrument cluster
F1.5	10	Trailer, RH turn signal
F1.6	10	Trailer, LH turn signal
F1.7	20	Clearance lamp relay
F1.8	60	Central Junction Box (CJB) (14A069)
F1.9	30	PCM power relay, Battery Junction Box (BJB) (14A003)
F1.10	60	Auxiliary battery relay, Battery Junction Box (BJB) (14A003)
F1.11	30	Injector Driver Module (IDM) power relay (Diesel only)
F1.12	60	Battery Junction Box (BJB) (14A003)
F1.13	50	Blower motor relay
F1.14	30	Trailer tow relay, parking lamp, Trailer tow relay, reversing lamp
F1.15	40	Main light switch (11554)
F1.16	50	Remote keyless entry module (15K602), Rear A/C blower speed relay 1
F1.17	30	Fuel pump relay
F1.18	60	Central Junction Box (CJB) (14A069)
F1.19	60	ABS control module (2C219)
F1.20	20	Trailer electronic brake control connector
F1.21	50	Modified vehicle power
F1.22	40 (60)	Trailer tow relay, battery charge (Striped chassis)
F1.23	60	Ignition switch (11572)
F1.24	—	not used
F1.25	20	Natural Gas Vehicle (NGV) module
F1.26	10	A/C clutch relay (4.2L, 4.6L)
F1.27	15	Daytime Running Lamps (DRL) module, Horn relay