



Rear Door Latch: Service and Repair Latch Remote Control

Front Door REMOVAL


NOTE: The RH latch remote control is illustrated. The LH latch remote control is symmetrically opposite.

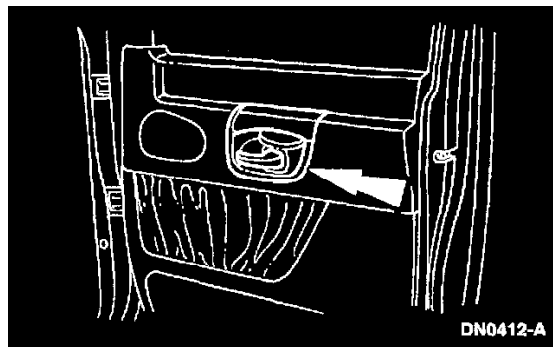

1. Remove the latch remote control trim cover.

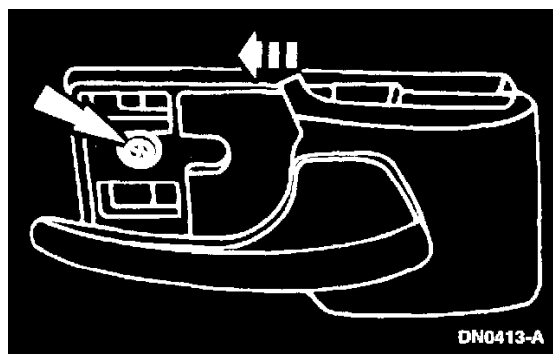

2. Remove the screw, and slide the latch remote control forward to disengage the retaining tabs from the door.

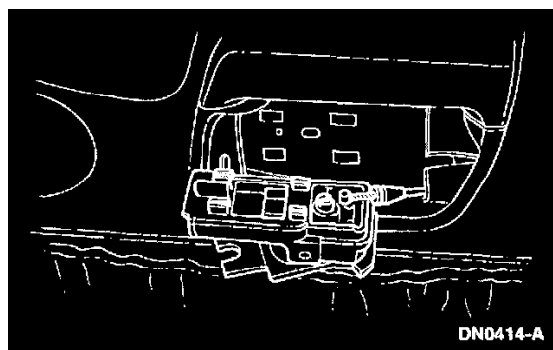


3. Disconnect the cable, and remove the latch remote control.

INSTALLATION


1. Follow the removal procedure in reverse order.

Single Latch Door, Side Hinged and Rear REMOVAL


1. Remove the door trim panel and watershield.

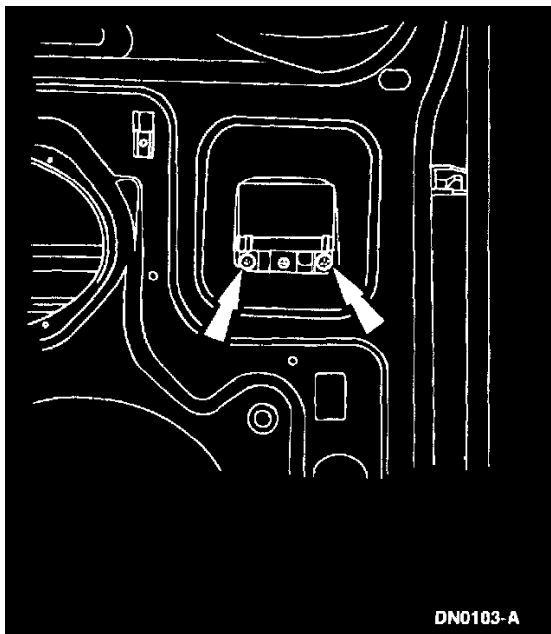

2. Remove the inside door handle nuts, and remove the inside door handle.

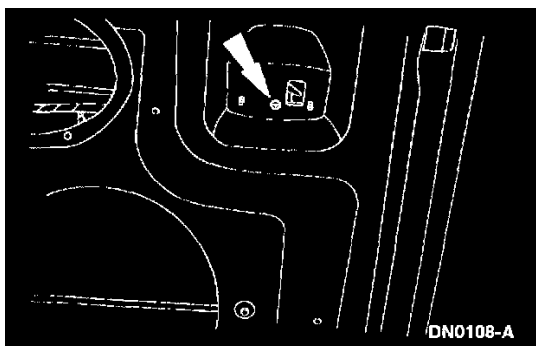


3. Remove the screw.

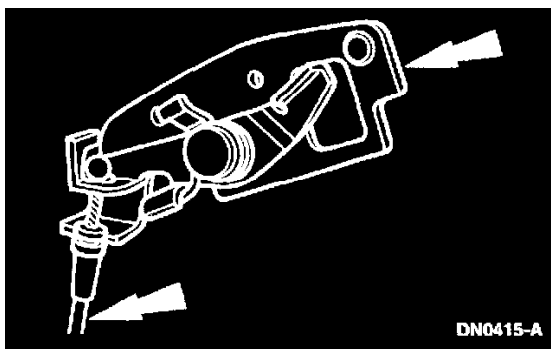

4. Disconnect the door latch cable, and remove the latch remote control.

INSTALLATION

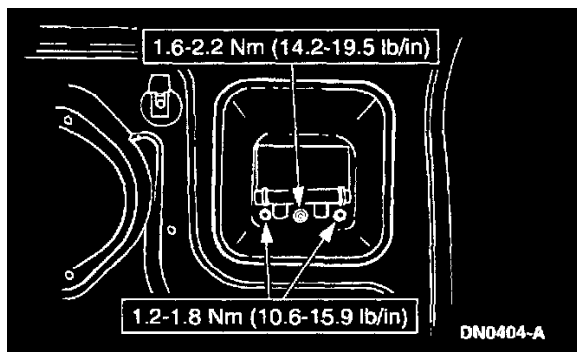

1. Follow the removal procedure in reverse order.