


## Rear Door Latch: Service and Repair


### Single Latch Door

#### REMOVAL


1. Remove the door trim panel and watershield.
2. Front door: remove the latch remote control.

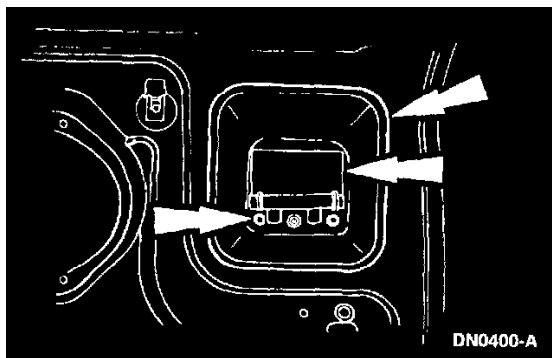

3. Side hinged or rear door: remove the retaining nuts, inside handle and bezel.

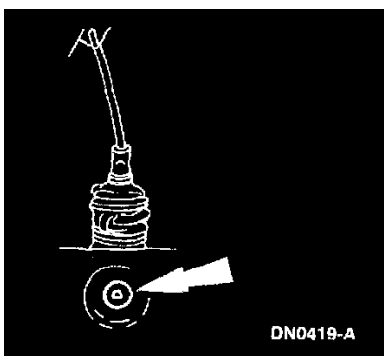


4. Drill out the power door lock actuator rivet, if so equipped.

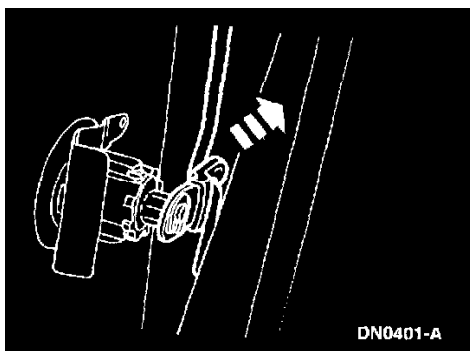


5. Front and side hinged doors: disconnect the lock cylinder rod from the lock cylinder lever.




6. Front and side hinged doors: disconnect the outside door handle-to-latch rod at the door latch.

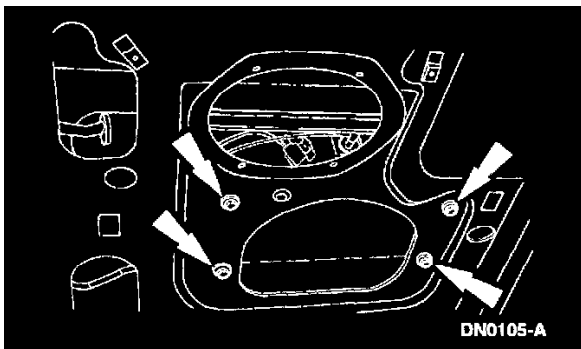


7. Rear door: remove the license plate housing screws, and pull the housing away from the door.

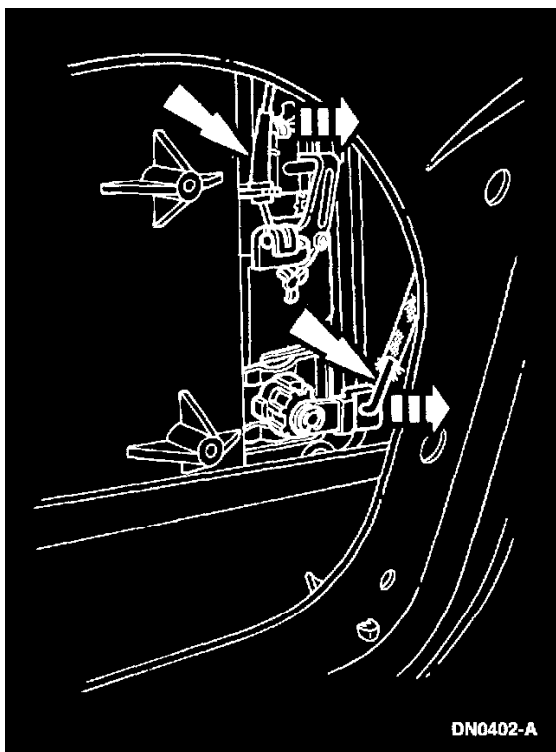


8. Rear door: disconnect the handle-to-latch cable at the door handle and the lock cylinder rod at the lock cylinder.

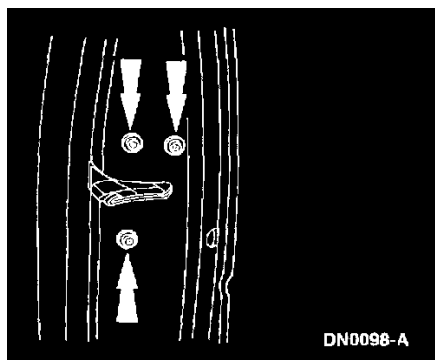


9. Remove the door latch retaining bolts.

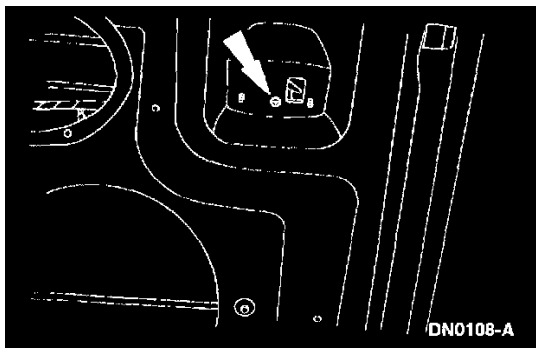

10. Side hinged and rear doors: remove the door latch remote control screw.


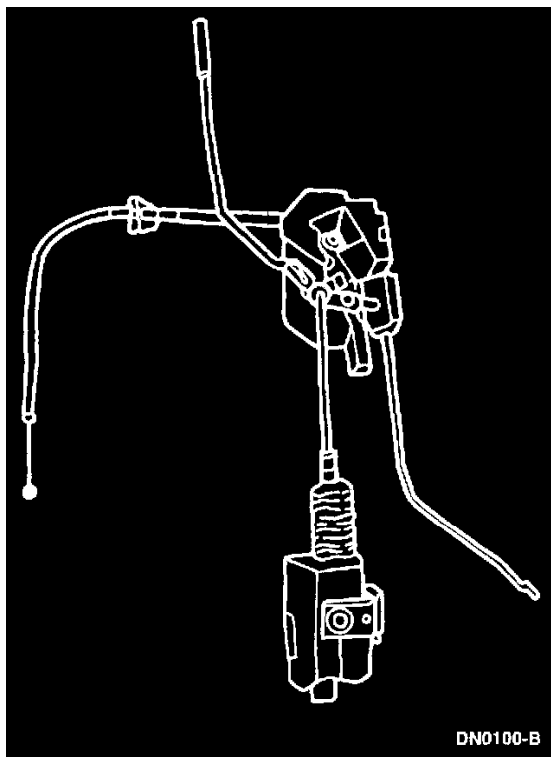


11. Front door: remove the door latch, latch remote control cable, lock cylinder rod, push-button rod and power door lock actuator, if so equipped, as an assembly.

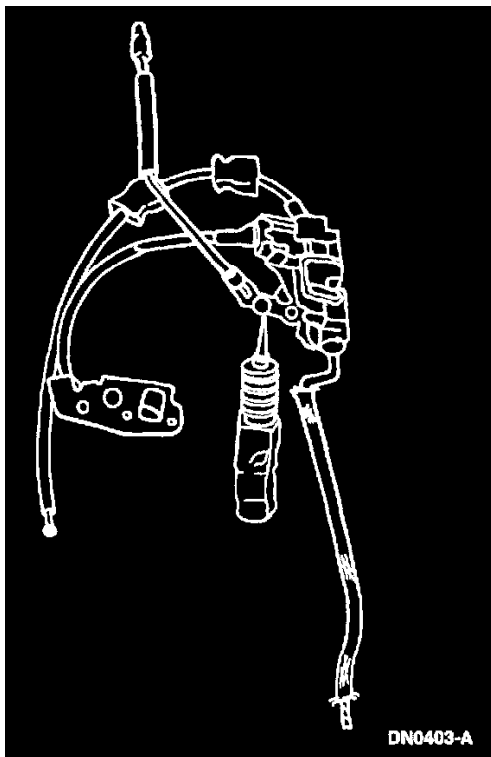

12. Side hinged and rear doors: remove the door latch, door latch remote control and cable(s), lock cylinder rod, push-button rod and power door lock actuator, if so equipped, as an assembly.

## INSTALLATION

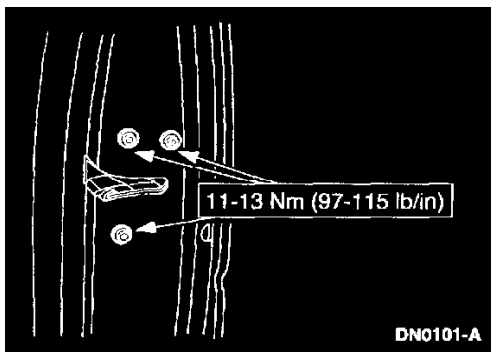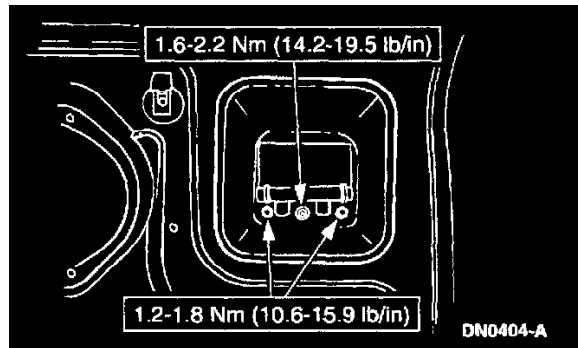

1. Follow the removal procedure in reverse order.